

# Advanced Application Notes

# SOLARA™ UV2



User Notes 2.0

## Printing on an Clear Material

- Step 1: Turn on Solara UV2. Clean and load material using prescribed methods
- Step 2: Initiate material width scan by choosing appropriate material type (vinyl or rigid)
- Step 3: If Solara indicates it is not able to detect side of material and aborts material scan, press “cancel” on the Solara control panel
- Step 4: On the Solara control panel press “OPERATE”, then press “MATERIAL”, then press “SET WIDTH”
- Step 5: Set the appropriate width using the “+” and “-”, then press “ENTER” two times to exit to main menu
- Step 6: Send the job from ImageRIP
- Step 7: Press “START JOB” on the Solara
- Step 8: Start job and fully monitor output through job completion. Fact: Effective media indexing (movement) will, by and large, determine material compatibility with SOLARA UV2.
- Step 9: Evaluate Ink cure and adhesion.

### Hint:

if the job you have sent or material width you have selected in ImageRIP is larger than the width you have manually entered, the Solara will not allow you to print.